

Code:	Designation:	Position:
A1	Instrument cluster	
A1e1	Left turn signal indicator lamp	40L
A1e2	Right turn signal indicator lamp	
A37	PSE control module (combined)	
E1	Left front headlamp unit	43L
E19/1	Left license plate lamp	24L
E19/2	Right license plate lamp	48L
E1e1	High beam	49L
E1e2	Low beam	
E1e3	Standing and parking lamp	
E2	Right front headlamp unit	29L
E21	Center high-mounted stop lamp	55L
E22/1	Left auxiliary turn signal lamp	22L
E22/2	Right auxiliary turn signal lamp	27L
E2e1	High beam	
E2e2	Low beam	
E2e3	Standing and parking lamp	
E3	Left tail lamp	44L
E3e1	Turn signal lamp	
E3e2	Tail and parking lamp	
E3e3	Reversing lamp	
E3e4	Stop lamp	
E3e5	Rear fog lamp	
E4	Right tail lamp	56L
E4e1	Turn signal lamp	
E4e2	Tail/parking lamp	
E4e3	Reversing lamp	
E4e4	Stop lamp	
E4e5	Rear fog lamp	
E5/1	Left fog lamp	26L
E5/2	Right fog lamp	31L
E6/1	Left turn signal lamp	23L
E6/2	Right turn signal lamp	28L
F1	Fuse and relay box	4L
F1	Fuse and relay box	12L
F1f14	Fuse 14	
F1f32	Fuse 32	
F1f35	Fuse 35	
F1f35	Fuse 35	

Code:	Designation:	Position:
F31	Battery fuse box	3L
F31f4	Fuse 4	
K54	Lock confirmation relay	19L
N10-3	Multi-function control module	13L
N3/10	ME-SFI [ME] control module	36L
N47-1	ASR/SPS [ASR/PMIL] control module	61L
N54/3	Radio frequency DAS [FBS] control module	21L
N7-1	Light module	12A
N7-1	Light module	4A
N7-1	Light module	20A
N7-1	Light module	28A
N7-1	Light module	36A
N7-1	Light module	44A
N7-1	Light module	53A
N7-1	Light module	61A
N7-1f1	Light module fuse 1	
N7-1f10	Light module fuse 10	
N7-1f11	Light module fuse 11	
N7-1f2	Light module fuse 2	
N7-1f3	Light module fuse 3	
N7-1f4	Light module fuse 4	
N7-1f5	Light module fuse 5	
N7-1f6	Light module fuse 6	
N7-1f7	Light module fuse 7	
N7-1f8	Light module fuse 8	
N7-1f9	Light module fuse 9	
S16/10	Transmission range recognition switch (voltage coded)	33L
S16/10s1	Reverse lamp switch	
S16/2	Backup lamp switch	33L
S2/1	Ignition/starter switch	6L
S4	Combination switch	9L
S4s1	Left and right turn signal switch	
S4s3	Low beam switch	
S4x1	Combination switch connector	17L
S6/1	Cockpit switch group	
S6/1s1	Hazard flasher switch	
S69/12	Trunk lid rotary tumbler/trunk lamp toggle switch	53L
S88/2	Trunk lid lock switch	52L
S9/1	Stop lamp switch (4-pin)	63L

Code:	Designation:	Position:
U12	Valid for left-hand steering	1B
U12	Valid for left-hand steering	46A
U12	Valid for left-hand steering	64B
U13	Valid for right-hand steering versions	1B
U13	Valid for right-hand steering versions	64B
U13	Valid for right-hand steering versions	58A
U24	Valid for MT [MG]	32G
U25	Valid for automatic transmission	32H
U52	Valid for J	52H
U54	Valid for all except J	50H
W1/1	Ground (frame/cockpit)	7G
W1/1	Ground (frame/cockpit)	17E
W1/1	Ground (frame/cockpit)	40E
W16	Ground (component compartment)	28E
W35	Ground (left front spring dome)	23E
W6	Ground (left wheelhousing in trunk)	47F
W7	Ground (right wheelhousing in trunk)	51D
W7	Ground (right wheelhousing in trunk)	56D
X11/15	Diagnostic intermediate connector (taillamp harness) (16-pin)	36F
X11/15	Diagnostic intermediate connector (taillamp harness) (16-pin)	35F
X12/1	Terminal block (circuit 15 unfused)	2L
X18	Interior and taillamp wiring harness connector	42E
X18/9	Taillamp harness connector (ATA, RCL [EDW, IFZ])	42H
X21	Stop lamp switch multipoint connector	60L
X26	Interior and engine wiring harness connector	21F
X4	Terminal block (circuit 30, fuse and relay box) (2-pin)	4G
X6/3	Circuit 58d terminal block (transmission tunnel)	17E
X6/3	Circuit 58d terminal block (transmission tunnel)	41E
X8/4	Trunk lid separation point	47E
Z30	Blinker connector sleeve	13E
Z30/1	Left blinker connector sleeve (feed from combination relay module)	17D
Z30/1	Left blinker connector sleeve (feed from combination relay module)	39E
Z30/2	Right blinker connector sleeve (feed from combination relay module)	16D
Z30/2	Right blinker connector sleeve (feed from combination relay module)	40E
Z7	Circuit 30 connector sleeve	12G
Z7	Circuit 30 connector sleeve	20E





